

System Activation - Activation Mode Overview

1. 00:00



VIDEO

Guardian System View.

AUDIO

NARRATOR

Welcome to the Activation Mode Overview.

When you want your C-DAC to run a previously created action, it needs to be activated.


To activate an action, you must first set your Guardian User Interface to Activation mode.

To enter Activation mode, simply select an action from the Activation panel on the

left side of the screen. Please note - individual actions may be organized into groups for administrative or operational purposes. In our Activation panel, groups are represented by black tiles with a blue trim.

To access an individual action, click on the dropdown arrow to the left of a group and select any of the grey action tiles. Here, we will select Training Test. Note how the action turns orange upon being selected.

2. 00:00

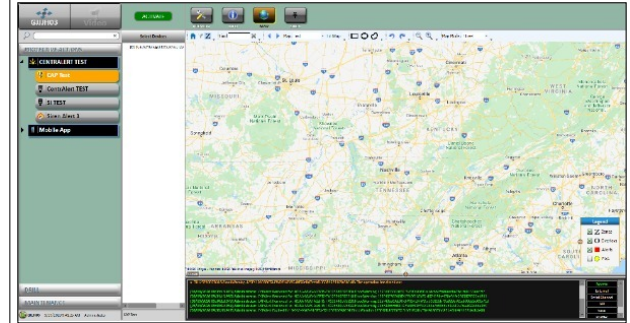

VIDEO

Activation Mode.

AUDIO

NARRATOR

Upon entering Activation mode, every action will default to the Map view. This shows the layout of the devices associated with the selected action.


To find your devices, you can zoom or scroll the map until your devices come into view. You can also hit the "Fit Map" control on the Map Control toolbar.

You can change this view by

System Activation - Activation Mode Overview

clicking on any of the other tabs in the Action Summary panel.

3. 00:00

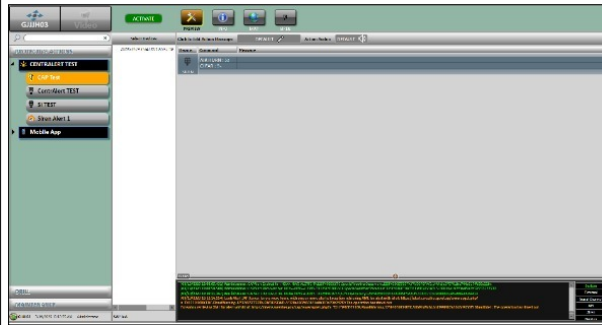

VIDEO

Preview Tab.

AUDIO

NARRATOR

The Preview tab shows every associated device along with the commands and messages it has been programmed to run. Depending on the devices associated with the action, the Preview tab allows you to edit the Default Action Message or Default Action Audio prior to activation. These can be edited by clicking on either the pen or the speaker icons beneath

the Action Summary panel. You can also edit any individual message prior to activation for certain devices. Here, the NOW! Notifier device will allow us to edit the Subject, Message and any Attachments that we want the message to include. Clicking on the panel under any of these headings will open a pop-up window that will allow you to make these changes. Note - Any message modifications made in this manner are not saved and will not change the original saved settings.

System Activation - Activation Mode Overview

4. 00:00



VIDEO

Info Tab.


AUDIO

NARRATOR

The Info tab shows the properties of the action, including the name, device type, location, schedule, icon and whether the action is operator-enabled. The Info tab also displays any System Recipe Commands associated with the action, along with any text or audio Action Activation Messages, and text or audio Action Cancellation Messages.

Note - the Info tab is read-only while in Activation mode.

5. 00:00

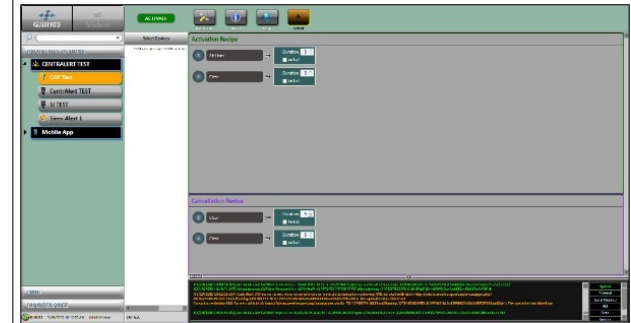

VIDEO

Device Tab.


AUDIO

NARRATOR

All relevant devices will also have a tab in the Action Summary panel. Here, we have both the NOW! Notifier device and the Siren device. If we click the NOW! Notifier tab, we will see the Activation and Cancellation instructions associated with the device. Similarly, clicking on the Siren tab will show the Activation and Cancellation

recipes for that device.
Note - the Device tab is read-only while in Activation mode.

6. 00:00

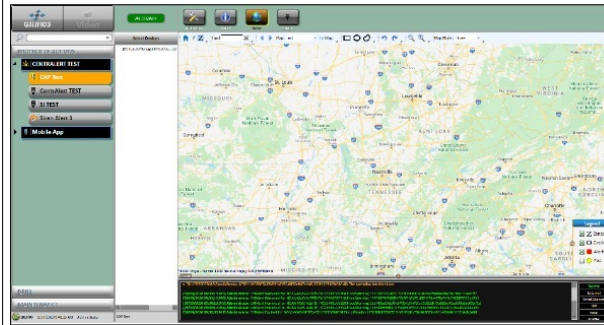

VIDEO

Map Tab.

AUDIO

NARRATOR

Let's return to the Map tab. You'll notice in the Select Devices panel that every device that appears on the map is also listed.


From here, you can check or uncheck any device for use in the activation of the action.

We can do this by selecting the checkbox next to the device type or by selecting the checkboxes next to each

individual device name. You can also select or deselect individual devices by clicking on the relevant icon on the map screen. A green device means that it will be included in your action whereas a black device means it will not. You can also use the rectangle, circle or polygon tool to create a shape on the map. This will override the default device selection and activate only those devices within the margins of the shape. Notice how devices outside the shape turn black and are deselected in the Select Devices panel.

System Activation - Activation Mode Overview

7. 00:00

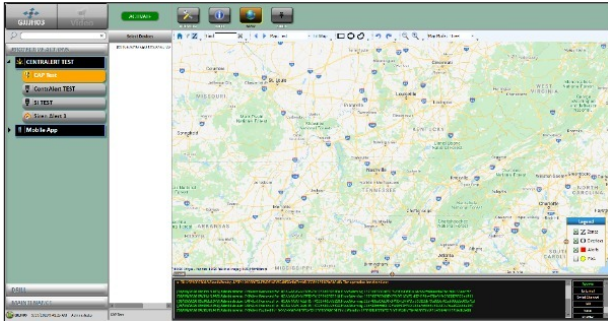

VIDEO

Reset.

AUDIO

NARRATOR

To reset the action, click on the System panel to navigate back to System view. If you then re-select the same action, all changes will have been reset.

8. 00:00



VIDEO

Conclusion.

AUDIO

NARRATOR

You have learned how to navigate your way through Activation mode. For more video tutorials, please return to your video dashboard screen.